


Skier CS-1030 Copy Stand User Manual

Structure

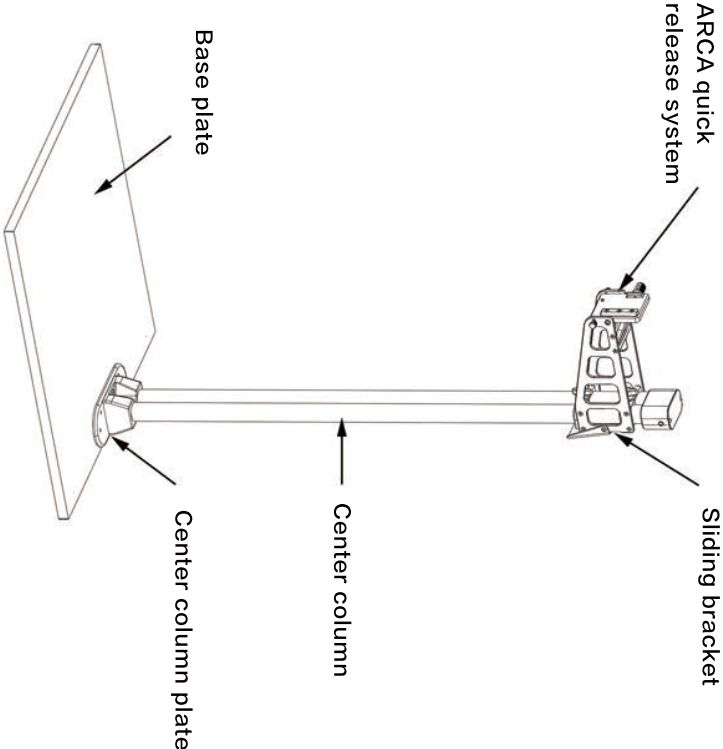


Specification

Model	Skier CS-1030	
Base size	60(L) x 60(W) x 1.8(H)	
Base material	Laminated Veneer Lumber (Fumigated)	
Center column height	Max height 104cm / Work height 94 cm	
Center column height range	13 ~ 103cm	
Payload	5kg	
Available size	Under A2 (42 x 59.4cm)	

Instructions


1. Assemble and install

- Use the screw bolt lock with the gasket, base plate, center column plate and the center column.
- The screw bolt must lock with the gasket first to prevent any damages of the base board.

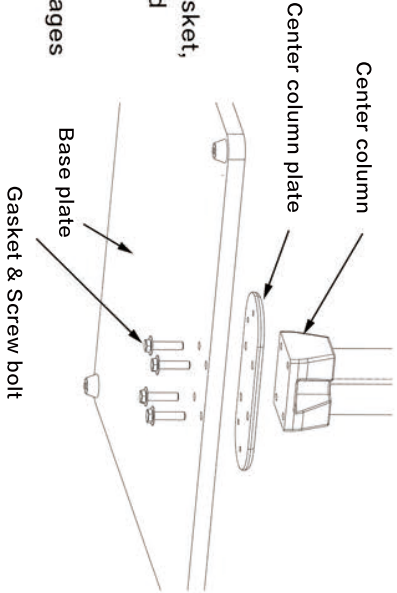


2. Adjust the height of sliding bracket

- Loosen the height locking knob and press the height adjustment plate to adjust the height of sliding bracket.
- According to the camera weight to adjust the Friction Knob.
- Make sure the height locking knob already lock tight before shooting.

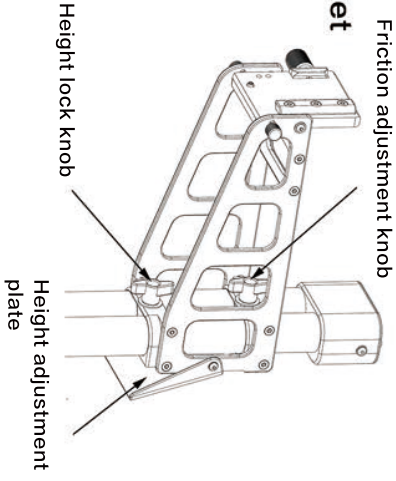

3. Fine-tuning camera angle

- Before leveling the camera, please make sure the base board is placed on a completely horizontal surface (Confirm with Two-Axis bubble level)
- After installing the camera, place a Two-Axis bubble level on the camera plane.
- Loosen the leveling lock knob and leveling the camera with leveling knob (confirm with Two-Axis bubble level), then lock tight the leveling knob.

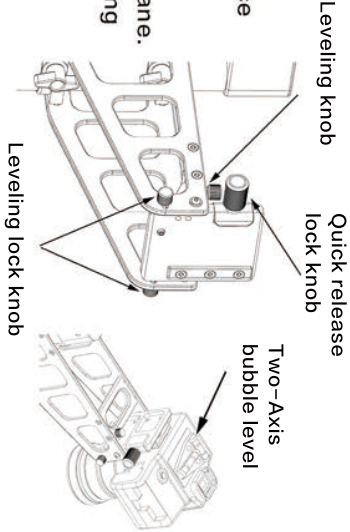

4. Extend other accessories

- There are two 1/4" Screw holes on the center column plate which can be used to mount arm, light etc.

